
Service Chest or Service Duct

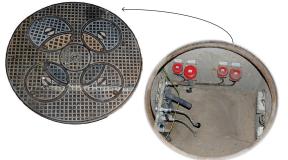



Phone connection point--

Data connection point -

Electricity connection point 1 X 63A 2 X 32A 4X 16A Water drain

Compressed air

- Water supply

Most of Gran Via's service chest have the same supply:

- III 400 V (CEE plug with 5 holes)
- 7 connections: 1X 63 amp, 2X 32A, 4X 16A
- Compressed air: 2 hoses per chest, 500-800 l/m, 7 bar.
- Water supply: 2 per chest, 1/2 inch, 4 bar, waste is 32mm.


Power supply main conductors will not have any kind of connection. It must be made in one piece, between the Fira supply box and the main circuit breaker of the stand electric distribution switchboard. Connections with Cee Forms, Powerlock or similar are not allowed in this segment. All the supply boxes and the service chests of Fira must remain accessible.

At Montjuïc venue, the multiple conductor cable will be provided in its tips of ring terminals with a minimum diameter of 6 mm and a maximum of 10 mm. The connection to the supply boxes of the Fira must be performed only by authorized personnel of Fira. Before that, the required documentation needs to be presented (See Legal procedures section).

At Gran Via venue, connections until 63A will be carried out through a Cee form of an appropriate intensity (16, 32 and 63A, three - phase). The connection to the service chest must be made by the stand electrical installer who will note the Fira base number which is used.

Supplies Distribution




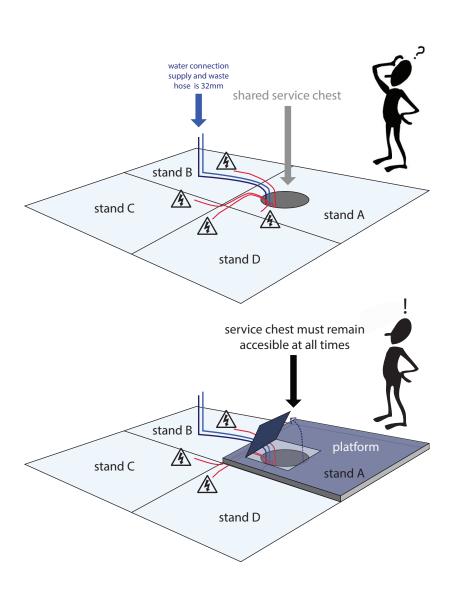

All connection service chests/pits located on the floors of the halls must be easy to register and must be easily accessible at all times.

If a platform is installed, a hatch will be needed. A platform of 50mm should be enough to cover electrical cables though we recommend a platform of minimum 80mm for water and air connections regardless if those supplies are needed for the space which has the service chest or is planned for any of the neighbouring stands.


If during build up or show any cable gets unplugged for some reason, the chest needs to be accessed by the technical teams.

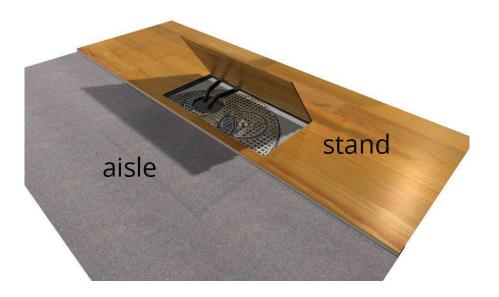

Whenever a service chest is half covered by a division wall or is at the limit of the stand, the area around the chest must remain accessible.

Fixed Fire Equipment Specifications




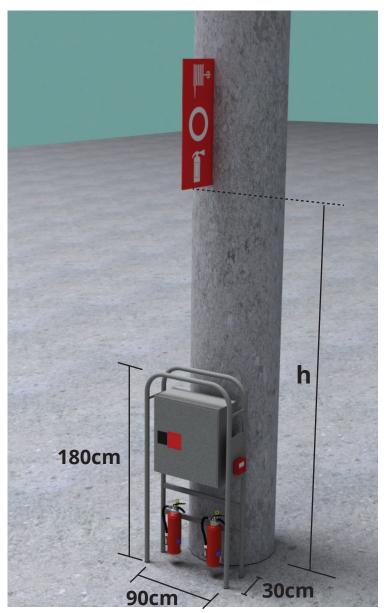


Note that the fire extinguisher equipment can only be cladded if all the equipment remains accessible at all times.

Hall	h (cm)	
Hall 1	295	
Hall 2	*	
Hall 3	490	
Hall 4	590	
Hall 5	295	
Hall 6	545	
Hall 7	295	
Hall 8	350	
Hall 8.1	349	

^{*} Columns in Hall 2 do not have embedded fire equipment.

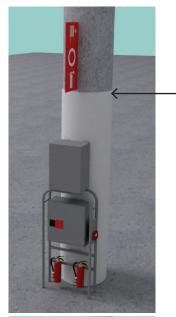


- A vinyl can reach up to the upper fire signage

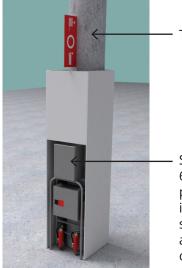


The cladding cannot cover the upper signage

Some of the fire equipment in Halls 3, 4 and 6 include fixed switchboards. Check floorplans and pictures of the halls in order to see if the specific column includes it or not. The switchboards can be cladded but need to be accessible during build up and dismantling to other exhibitors.


Goodslift Hall 8.1

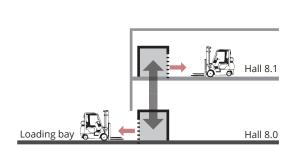

The lifts have a rear and front door system. Loading does not affect logistics inside Hall 8.0

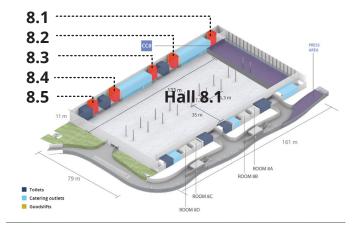

Max weight	Dimensions lift mm (width X length)	Dimensions door mm (wD X hD)
4000	2500 X 3600	2650 X 2100
6000	2500 X 5400	2650 X 2700
4000	2500 X 3600	2700 X 2300
6000	2500 X 5400	2650 X 2700
6000	2500 X 5400	2650 X 2700
	4000 6000 4000	kg mm (width X length) 4000 2500 X 3600 6000 2500 X 5400 4000 2500 X 3600 6000 2500 X 5400

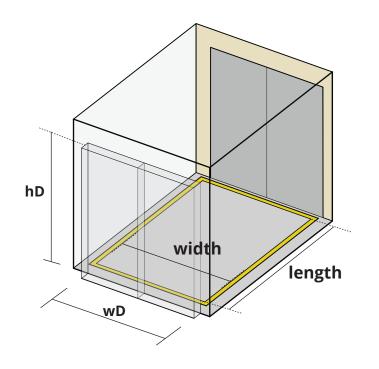





It is totally forbidden to use freight lifts with personnel inside them. These are only to be used for freight without personnel, nor forklifts nor pallet jacks.

Maximum weight allowed is the freight weight only, according to each freight weight lift limit indicated before. (6 or 4 tonnes).

Yellow lines drawn in the freight lift floors must not be crossed by the freight, otherwise doors can't close.

Please make sure that the freight inside the freight lift is fixed on the floor so that it doesn't crash with the building walls when the freight lift moves.

Finally, please make sure you follow the instructions of the freight lift operators.